MANUAL DEL USUARIO

ESTIMADO CLIENTE

Felicitaciones por su compra.
Por favor lea cuidadosamente este manual y guárdelo para su futura referencia.
Para soporte adicional, escríbanos a info@premiermundo.com

KIT ADAPTADOR DE AUTO PARA REPRODUCTOR DE VCD/CD/MP3/MD

CASETE ADAPTADOR

Escuche su reproductor de CD o MD con conector de audífonos a través de los altavoces de cualquier reproductor de casetes incluyendo reproductores para auto y domésticos.

1. Conecte el enchufe de 3.5 mm del extremo del cable en la salida de audífonos o línea del reproductor de CD o MD.
2. Encienda el reproductor de casete y reduzca completamente el nivel de volumen.
3. Inserte el adaptador de casete en la casetera del reproductor.
4. Verifique que el reproductor se encuentre el modo PLAY.
5. Si el adaptador está conectado a la salida de audífonos del reproductor de CD, ajuste el nivel de volumen en un nivel medio.
6. Inicie la reproducción del CD o MD.
7. Ajuste el nivel de volumen de los altavoces según su preferencia.
8. Al terminar, siempre retire el casete adaptador de la casetera.
9. Guarde el adaptador en un lugar seguro con una temperatura normal. (no exponga a temperaturas altas)

REEMPLAZO DEL FUSIBLE

Si el reproductor de CD o MD no está obteniendo corriente del adaptador de auto revise el fusible. En caso que esté quemado, remplace tal como se explica a continuación:

1. Desconecte el adaptador del enchufe de encendedor.
2. Remueva el extremo del conector, retirando los tornillos que lo sujetan.
3. Retire el fusible quemado.
4. Inserte un nuevo fusible en buen estado.
5. Instale el extremo del conector y asegúrelo con los tornillos.

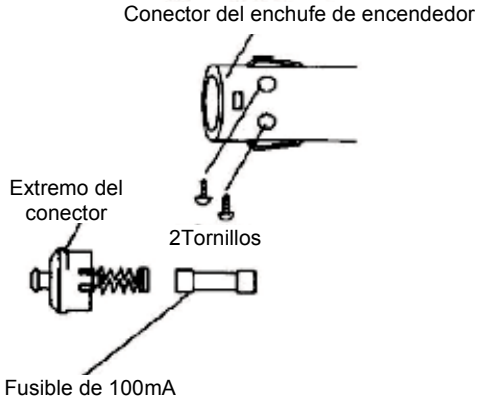

ADAPTADOR DC DE 800mA

Este adaptador es un producto de alta calidad que convierte la corriente del enchufe para encendedor del auto . Podrá seleccionar la corriente de salida entre 1.5 - 3 – 4 - 5 – 6 – 7 – 8 - 9 o 12 voltios. De tal manera que podrá usarlo con la mayoría de los reproductores portátiles, video juegos y muchas otras aplicaciones de operación a batería.

También podrá ajustar la polaridad del contacto central para que corresponda con la polaridad de su reproductor.

1. Determine el voltaje de salida requerido, verificando las especificaciones del reproductor.
2. Ajuste el selector de voltaje al adecuado.
3. El adaptador está equipado con 6 conectores. Determine cual es el adecuado para su reproductor o dispositivo a baterías.
4. PRECAUCION: Antes de conectar el enchufe del adaptador verifique la polaridad requerida por el dispositivo y ajuste de acuerdo a esto ya que una polaridad invertida podrá causar daños permanentes al producto. Los símbolos de polaridad mas comunes son los siguientes.

5. Conecte el adaptador al enchufe para el encendedor y opere el dispositivo normalmente.

PRECAUCION: Si el dispositivo no funciona, desconecte inmediatamente y revise las instrucciones de anteriores.

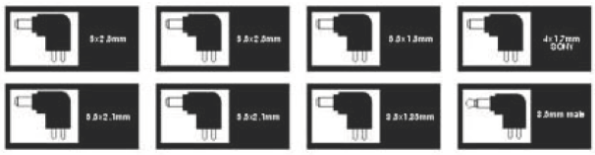

PREMIER

PW-808CARKIT

PORTABLE VCD/CD/MP3/MD CAR ADAPTOR KIT

VCD/CD/MD/MP3 CASSETTE ADAPTER

Play your portable CD players and Mini Disc players through any audio cassette player

Usage:

This product enables any portable CD or MD player(s) with a built-in headphone jack, to be heard through the speakers of any cassette playback system, This includes automobile and all portable cassette players.

Instructions of cassette Adapter:

1. Connect the 3.5mm plug at the end of the cord into the "headphones" or "Line out-put" jack of your portable CD or MD player(s).
2. Turn cassette player on and turn speaker volume all the way down.
3. Insert the cassette adapter into the cassette player.
4. Make sure that the cassette player is in "PLAY" mode.



5. If using headphones' output, adjust the volume on CD/MD player(s) the medium level.
6. Initiate "PLAY" Bon your CD/MD player(s).
7. Adjust the cassette player's speaker volume to the desired level.
8. Eject the cassette adapter from the cassette player when finished. DO NOT leave this unit inside the cassette player when not in use. After use, store the unit in a safe place in normal temperature. DO NOT expose this unit to excessive heat.

Fuse Replacement

If the CD compact player does not operate, check the Fuse. If it is blown, replace it as follows:

1. Turn off the CD compact player and remove the cigarette lighter socket.
2. Remove the plug end by loosen two screws on the plug.
3. Remove the defective fuse from the cover.
4. Insert the good fuse into the cover.
5. Install the plug end and tighten two screws on the plug.

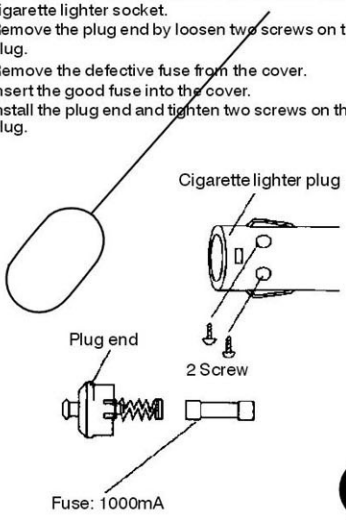

800mA CAR DC CONVERTER

DC Adapter with 800mA output powers portable CD players and Mini Disc players through your car's cigarette lighter.

Usage:

The product is a high quality 800mA regulated DC Adapter with the ability to convert the power from your car cigarette lighter. The following power output selections are available 1.5,3,4.5,6,7.5,9 or 12 Volts, You may use this product with most portable cassette players, radios, CD players, hand held games, keyboards, calculators, and many other battery operated appliances. This unit also has reversible polarity to allow you to use it with products that have either positive or negative center pin.

Instructions for DC power adapter:

1. Determine the proper output voltage setting. Check the rating plate or number of batteries used in the product.
2. Set the selector switch to the proper voltage.
3. Six ADAPTER PLUGS are supplied with your Adapter. Determine which ADAPTER PLUG best fits into the external power supply jack (sometimes labeled "DC IN") of the product to be powered.
4. CAUTION: Before attaching ADAPTER PLUG into the external power jack, check instructions or rating on the power jack to determine the tip polarity. Reverse polarity may cause permanent damage to the product. Common symbols for tip polarity are as follows:
   Align the 'TIP' of ADAPTER PLUG with appropriate polarity mark (either 'NEG[-]' or 'POS[+]') on the sleeve, then connect into the external power jack.

5. Connect ADAPTER PLUG to power jack of the product, plug adapter into standard electrical outlet, then operate the product as usual.

   CAUTION: If it does not operate, disconnect the adapter IMMEDIATELY and review instructions above.



CE

6 392476 630138